

8171


Mobile tower with cross-beams



Assembly in no time: Thanks to the practical HYMER lifter, diagonals and struts can be attached and detached quickly and safely from below. With four height-adjustable swivel castors.

Features:

- **Work platform: 2.95 × 0.65 m**
- **Castors: Ø 200 mm**
- **Permissible load: 200 kg/m² (2.0 kN/m²)**

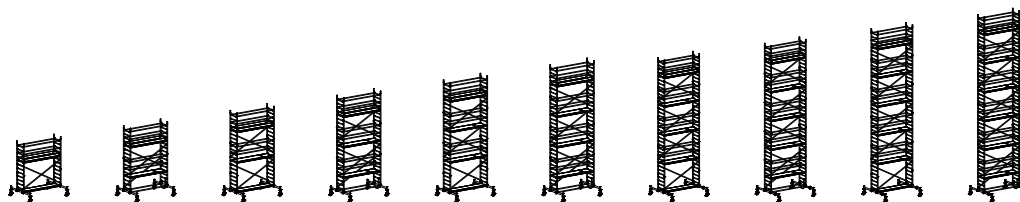

Reach height (approx. m)	4.60	5.60	6.60	7.60	8.60	9.60	10.60	11.60	12.60	13.60
Tower height (approx. m)	3.82	4.82	5.82	6.82	7.82	8.82	9.82	10.82	11.82	12.82
Standing height (approx. m)	2.60	3.60	4.60	5.60	6.60	7.60	8.60	9.60	10.60	11.60
Platform length (approx. m)	2.95	2.95	2.95	2.95	2.95	2.95	2.95	2.95	2.95	2.95
Frame section width (approx. m)	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80

Ballasting

Indoor, centre (kg)	0	0	0	0	0	0	0	0	0	0
Indoor, on wall (kg)	0	20 ⁽¹⁾	20 ⁽¹⁾⁽²⁾	40 ⁽¹⁾⁽²⁾	60 ⁽¹⁾⁽²⁾	70 ⁽¹⁾⁽²⁾	70 ⁽¹⁾⁽²⁾	110 ⁽²⁾⁽⁴⁾	not permitted	not permitted
Outdoor, centre (kg)	0	0	0	0 ⁽³⁾	60 ⁽³⁾	140 ⁽³⁾	not permitted	not permitted	not permitted	not permitted
Outdoor, on the wall (kg)	20 ⁽¹⁾	40 ⁽¹⁾⁽²⁾	80 ⁽¹⁾⁽²⁾	100 ⁽¹⁾⁽²⁾⁽³⁾	140 ⁽¹⁾⁽²⁾⁽³⁾	not permitted	not permitted	not permitted	not permitted	not permitted
Order no.	817104	817105	817106	817107	817108	817109	817110	817111	817112	817113

⁽¹⁾ Ballasting is not required when using two wall connectors (607141) for pressure support.

⁽²⁾ Longitudinal cross-beam (607143) also required.

⁽³⁾ Two cross-beam extensions (817133) also required.

⁽⁴⁾ Ballasting is not required when using two wall connectors (607141) for pressure support. The tower must be set up without a cross-beam extension.

Required additional parts from page 23.

Individual parts and parts list can be found in the instructions for assembly and use on page 67. | [Click here.](#)